

Wiring diagram up to serial number (not included) : 09AAP	
<p>10A Max *</p> <p>400W REG</p> <p>F (230V/50Hz)</p> <p>N</p> <p>L1</p> <p>Ln</p> <p>KNX</p>	
<p>Wiring diagram TYPE 1, from serial number (included): 09AAP (it depends on the terminal included in the package)</p>	<p>Wiring diagram TYPE 2, from serial number (included): 09AAP (it depends on the terminal included in the package)</p>
<p>50 - 400 W</p> <p>L</p> <p>N</p> <p>Ln</p> <p>L1</p> <p>N</p> <p>F (230V/50Hz)</p> <p>KNX</p>	<p>50 - 400 W</p> <p>N</p> <p>L</p> <p>Ln</p> <p>L1</p> <p>N</p> <p>F (230V/50Hz)</p> <p>KNX</p>