

Programming mode activation from *Touch*

Before downloading the application program, the *display* will show the message NO PROGRAM in its upper part and the message LED ON or LED OFF in the central part, indicating the status of the programming LED.

The programming mode status could be switched with the button 7 of the Touch, besides the programming button. The led of this button will remain blinking until a complete download is carried out.

