



MAXinBOX 20

MAXinBOX 16 v4

MAXinBOX 12

MAXinBOX 8 v4

Multifunction Actuator with 20 / 16 / 12 / 8 Outputs

ZIOMB20
ZIOMB16V4
ZIOMB12
ZIOMB8V4

Application program versions: [1.10 – 1.11]

User manual edition: [1.11]_a

CONTENTS

Contents	2
1 Introduction	3
1.1 MAXinBOX 20 / 16 v4 / 12 / 8 v4	3
1.2 Start-Up and Power Loss	4
2 Configuration.....	5
2.1 General.....	5
2.2 Outputs.....	7
2.3 Logic Functions.....	8
2.4 Master light	9
2.5 Scene Temporisation.....	12
2.6 Manual Control	14
ANNEX I. Communication Objects – MAXinBOX 20 / 12 / 8 v4.....	19
ANNEX II. Communication Objects – MAXinBOX 16 v4	26
ANNEX III. Functionalities per model	33

1 INTRODUCTION

1.1 MAXINBOX 20 / 16 v4 / 12 / 8 v4

MAXinBOX 16 v4, MAXinBOX 12 and MAXinBOX 8 v4 from **Zennio** are two versatile KNX actuators featuring a wide variety of functions, being both of them entirely equivalent except for the number of relay outputs they offer (20, 16, 12 and 8, respectively). Its main functionalities are:

- **Relay outputs**, respectively, configurable as:
 - Individual **ON/OFF outputs**,
 - Independent **shutter channels** (with or without slats),
 - **Two-pipe fan coil modules** where both the fan speed control and the valve control are performed through relays,
 - A combination of the above.
- **Customisable, multi-operation logic functions.**
- **Master light control modules** for an easy, out-of-the-box control of a set of luminaires (or functionally equivalent devices) one of which acts as a general lamp and the others as secondary lamps.
- **Scene-triggered action control**, with an optional delay in the execution.
- **Manual operation / supervision** of the relay outputs through the on-board pushbuttons and LEDs.
- **Heartbeat** or periodical “still-alive” notification.
- **Relay Switches Counter.**
- **KNX Security:** For detailed information about the functionality and configuration of KNX security, consult the specific user manual “KNX Security”, available in the product section of the Zennio web portal (www.zennio.com).

Note: ANNEX II shows a table as a summary of the functionalities and number of blocks of each model.

1.2 START-UP AND POWER LOSS

During the start-up of the device, the Prog./Test LED will blink in blue colour for a few seconds before the device is ready. External orders will not be executed during this time, but afterwards.

Depending on the configuration, some specific actions will also be performed during the start-up. For example, the integrator can set whether the output channels should switch to a particular state and whether the device should send certain objects to the bus after the power recovery. Please consult the next sections of this document for further details.

On the other hand, when a bus power failure takes place, MAXinBOX will interrupt any pending actions, and will save its state so it can be recovered once the power supply is restored.

For safety reasons, all **shutter channels** will be stopped (i.e., the relays will open) if a power loss takes place, while the individual outputs and fan coil contacts will switch to the specific state configured in ETS (if any).

2 CONFIGURATION

2.1 GENERAL

After importing the corresponding database in ETS and adding the device into the topology of the desired project, the configuration process begins by entering the Parameters tab of the device.

ETS PARAMETERISATION

The only parameterisable screen available by default is General. From this screen it is possible to activate/deactivate all the required functionality.

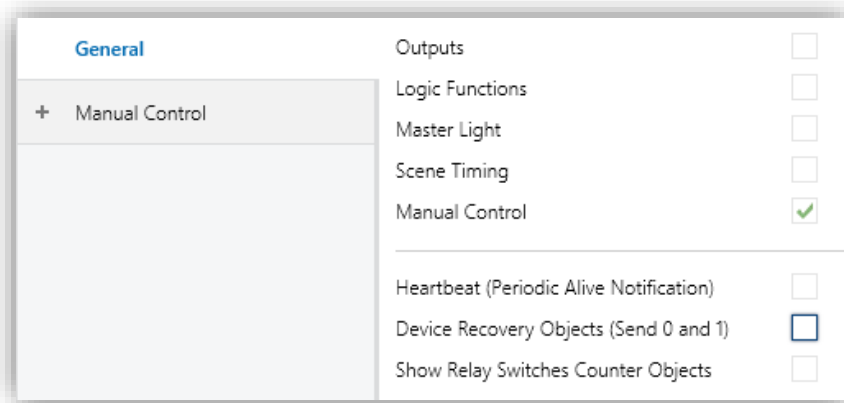


Figure 1. General screen

- **Outputs** [[disabled/enabled](#)]¹: enables o disables the “Outputs” tab on the left menu. See section 2.2 for more details.
- **Logic Functions** [[disabled/enabled](#)]: enables o disables the “Logic Functions” tab on the left menu. See section 2.3 for more details.
- **Master Light** [[disabled/enabled](#)]: enables o disables the “Master Light” tab on the left menu. See section 2.4 for more details.
- **Scene Temporization** [[disabled/enabled](#)]: enables o disables the “Scene Temporization” tab on the left menu. See section 2.5 for more details.

¹ The default values of each parameter will be highlighted in blue in this document, as follows: [[default/rest of options](#)].

- **Manual Control** [*disabled/enabled*]: enables or disables the “Manual Control” tab on the left menu. See section 2.6 for more details.
- **Heartbeat (Periodic Alive Notification)** [*disabled/enabled*]: this parameter lets the integrator incorporate a one-bit object to the project (“**[Heartbeat] Object to Send ‘1’**”) that will be sent periodically with value “1” to notify that the device is still working (*still alive*).

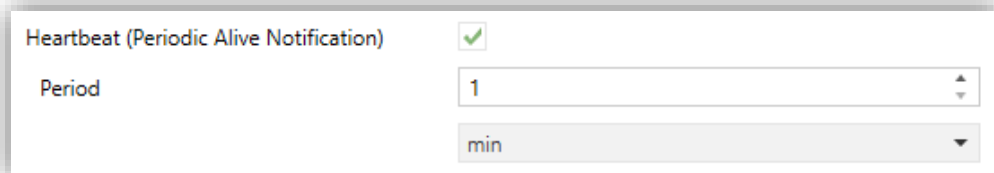


Figure 2. Heartbeat (Periodical Alive Notification).

Note: *The first sending after download or bus failure takes place with a delay of up to 255 seconds, to prevent bus overload. The following sendings match the period set.*

- **Device Recovery Objects (Send 0 and 1):** [*disabled/enabled*]: this parameter lets the integrator activate two new communication objects (“**[Heartbeat] Device Recovery**”), which will be sent to the KNX bus with values “0” and “1” respectively whenever the device begins operation (for example, after a bus power failure). It is possible to parameterise a certain **delay** [*0...255*] to this sending.




Figure 3. Device Recovery Objects

Note: *after download or bus failure, the sending takes place with a delay of up to 6,35 seconds plus the parameterised delay, to prevent bus overload.*

- **Show Relay Switches Counter Objects** [*disabled/enabled*]: enables two communication objects to keep track of the number of switches performed by each of the relays (“**[Relay X] Number of Switches**”) and the maximum number of switches carried out in a minute (“**[Relay X] Maximum Switches per Minute**”).

2.2 OUTPUTS

MAXinBOX 20 / MAXinBOX 16 v4 / MAXinBOX 12 / MAXinBOX 8 v4 actuator incorporates **20 / 16 / 12 / 8 relay outputs**, which can be configured as:

- **Individual binary outputs**, which allows an independent control of loads (it is possible to control up to 20 / 16 / 12 / 8 different loads, respectively).
- **Shutter channels**, which allow controlling the motion of shutters or blinds (it is possible to control up to 10 / 8 / 6 / 4 independent shutter channels, respectively).
- **Fan Coil modules**, which allow the control of the fan and the valve of two-pipe fan coil units (it is possible to control up to 5 / 4 / 3 / 2 independent fan coil blocks, respectively).

For detailed information about the functionality and the configuration of the related parameters, please refer to the following specific manuals, all of them available within the product section at the Zennio website (www.zennio.com):

- **Individual outputs.**
- **Shutter channels.**
- **'Relays' Fan Coil.** Note that these devices only support two-pipe fan coils with On/Off valves. Therefore, any references to four-pipe fan coils and 3-Point valves do not apply to them.

2.3 LOGIC FUNCTIONS

This module makes it possible to perform numeric and binary operations to incoming values received from the KNX bus, and to send the results through other communication objects specifically enabled for this purpose.

Up to 30 (in MAXinBOX 20 / 12) / **20** (in MAXinBOX 16 / 8 v4) **different and independent functions** can be implemented, each of them entirely customisable and consisting in **up to 4 consecutive operations each one**.

The execution of each function can depend on a configurable **condition**, which will be evaluated every time the function is **triggered** through specific, parameterisable communication objects. The result after executing the operations of the function can also be evaluated according to certain **conditions** and afterwards sent (or not) to the KNX bus, which can be done every time the function is executed, periodically or only when the result differs from the last one.

Please refer to the “**Logic Functions**” user manual, available within the MAXinBOX 20 / MAXinBOX 16 v4 / MAXinBOX 12 / MAXinBOX 8 v4 product section at the Zennio homepage, www.zennio.com, for detailed information about the functionality and the configuration of the related parameters.

2.4 MASTER LIGHT

Any of the models implements **two Master Light** which can be enabled and configured independently.

The Master Light function brings the option to monitor the state of up to 12 light sources (or even more, if the Master Light controls from multiple Zennio devices are linked together) or of any other elements whose state is transmitted through a binary object and, depending on those states, perform a **master order** every time a certain trigger signal (again, a binary value) is received through a specific object.

Such master order will consist in:

- A **general switch-off** order, if at least one of the up to twelve status objects is found to be on.
- A **courtesy switch-on** order, if none of the up to twelve status objects is found to be on.

Note that the above switch-off and switch-on orders are not necessarily a binary value being sent to the bus – it is up to the integrator the decision of what to send to the KNX bus in both cases: a shutter order, a thermostat setpoint or mode switch order, a constant value, a scene... Only the trigger object and the twelve status objects are required to be binary (on/off).

The most typical scenario for this Master Light control would be a hotel room with a master pushbutton next to the door. When leaving the room, the guest will have the possibility of pressing on the master pushbutton and make all the lamps turn off together. Afterwards, back on the room and with all the lamps off, pressing on the same master pushbutton will only make a particular lamp turn on (e.g., the closest lamp to the door) – this is the courtesy switch-on.

Besides, it is possible to concatenate two or more Master Light modules by means of a specific communication object which represents the general state of the light sources of each module. Thereby, it is possible to expand the number of light sources by considering the general state of one module as an additional light source for another.

ETS PARAMETERISATION

Once the Master Light function has been enabled, a specific tab will be included in the menu on the left. This new parameter screen contains the following options:

Parameter	Value	Unit
Number of State Objects	1	
Trigger Value	0/1	
General Switch Off		
Delay	0	x 1 s
Binary Value	<input checked="" type="checkbox"/>	
Scaling	<input type="checkbox"/>	
Scene	<input type="checkbox"/>	
HVAC	<input type="checkbox"/>	
Courtesy Switch On		
Delay	0	x 1 s
Binary Value	<input checked="" type="checkbox"/>	
Scaling	<input type="checkbox"/>	
Scene	<input type="checkbox"/>	
HVAC	<input type="checkbox"/>	

Figure 4. Master Light.

- **Number of State Objects** [[1...12](#)]: defines the number of 1-bit status objects required. These objects are called “[ML] Status Object *n*.” In addition, the general status object (“[ML] General status”) will always be available in the project topology. It will be sent to the bus with a value of “1” whenever there is at least one of the above state objects with such value. Otherwise (i.e., if none of them has a value of “1”), it will be sent with a value of “0”.
- **Trigger Value** [[0](#) / [1](#) / [0/1](#)]: sets the value that will trigger, when received through “[ML] Trigger”, the master action (the general switch-off or the courtesy switch-on).
- **General Switch-Off.**
 - **Delay** [[0...255](#)] [[x 1 s](#)]: defines a certain delay (once the trigger has been received) before the execution of the general switch-off. The allowed range is 0 to 255 seconds.

- **Binary Value** [[disabled/enabled](#)]: if checked, object “[ML] General Switch-off: Binary Object” will be enabled, which will send one “0” whenever the general switch-off takes off.
- **Scaling** [[disabled/enabled](#)]: if checked, object “[ML] General Switch-off: Scaling” will be enabled, which will send a percentage value (configurable in **Value** [[0...100](#)]) whenever the general switch-off takes off.
- **Scene** [[disabled/enabled](#)]: if checked, object “[ML] General Switch-off: Scene” will be enabled, which will send a scene run / save order (configurable in **Action** [[Run / Save](#)] and **Scene Number** [[1...64](#)]) whenever the general switch-off takes off
- **HVAC** [[disabled/enabled](#)]: if checked, object “[ML] General Switch-off: HVAC mode” will be enabled, which will send an HVAC thermostat mode value (configurable in **Value** [[Auto / Comfort / Standby / Economy / Building Protection](#)]) whenever the general switch-off takes off.

Note: *the above options are not mutually exclusive; it is possible to send values of different nature together.*

● **Courtesy Switch-On:**

The parameters available here are entirely analogous to those already mentioned for General Switch-Off. However, in this case the names of the objects start with “[ML] Courtesy Switch-On (...).” On the other hand, sending **scene save orders** is not possible for the courtesy switch-on (only orders to play scenes are allowed).

Note: *object “[ML] Courtesy Switch-On: Binary Object” sends the value “1” (when the courtesy switch-on takes place), in contrast to object “[ML] General Switch-Off: Binary Object”, which sends the value “0” (during the general switch-off, as explained above).*

2.5 SCENE TEMPORISATION

The scene temporisation allows imposing **delays over the scenes of the outputs**. These delays are defined in parameters and can be applied to the execution of one or more scenes that may have been configured.

Please bear in mind that, as multiple delayed scenes can be configured for each individual output / shutter channel / fan coil module, in case of receiving an order to execute one of them when a previous temporisation is still pending for that output / channel / module, such temporisation will be interrupted and only the delay and the action of the new scene will be executed.

ETS PARAMETERISATION

Prior to setting the **scene temporisation**, it is necessary to have one or more scenes configured in some of the outputs. When entering the Configuration window under Scene Temporization, all configured scenes will be listed, together with a few checkboxes to select which of them need to be temporised, as shown in Figure 5.

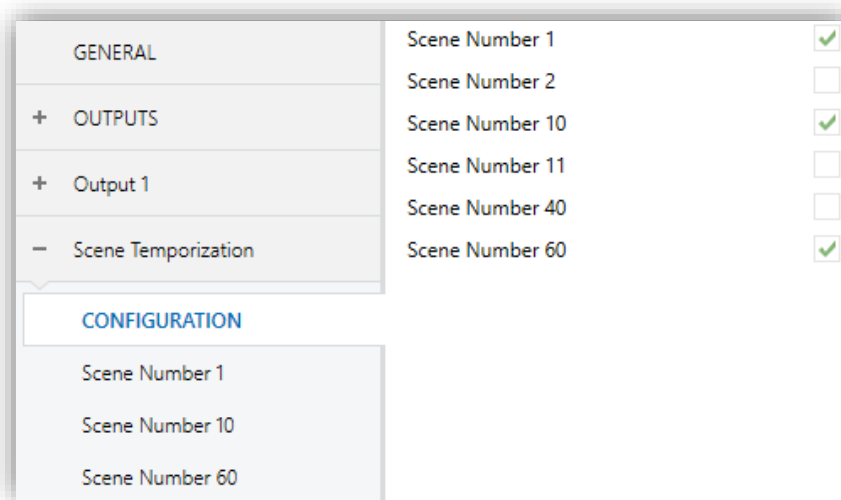


Figure 5. Scene Temporization

Enabling a certain scene number n brings a new tab with such name to the menu on the left, from which it is possible to configure the temporisation of that scene for each of the outputs where it has been configured.

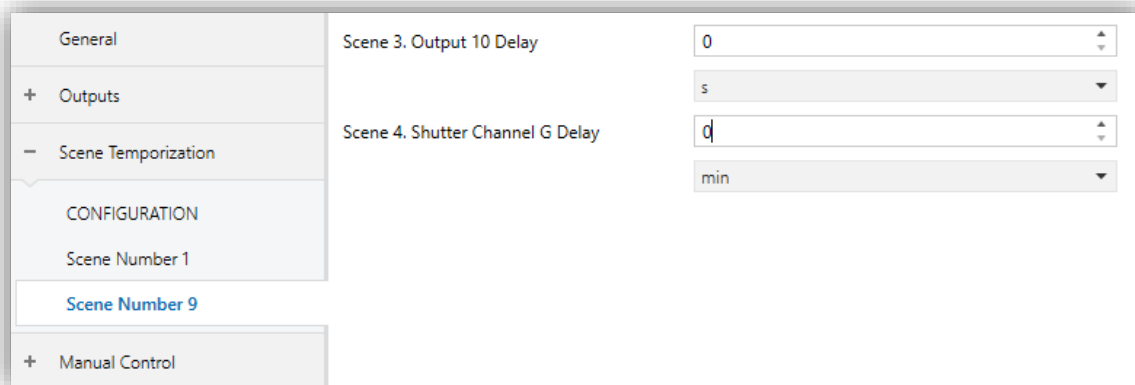


Figure 6. Configuration of Scene Temporization

Therefore, parameter “**Scene m. Z Delay**” [$0 \dots 3600$ [s] / $0 \dots 1440$ [min] / $0 \dots 24$ [h]], defines the delay that will be applied to the action defined in Z for the execution of scene m (where Z may be a specific individual output, shutter channel or fan coil module).

Note: In the configuration of a scene of an output / shutter channel / fan coil it is possible to parameterize several scenes with the same scene number. This means that several delay parameters associated with the same output appear in the configuration tab of the delays of that scene. With this parameterization, the behaviour will be as follows: the action and delay of the first scene parameterized with the same scene number will always prevail, where the highest priority scene is 1 (the first in the scene configuration tab) and the lowest priority is the last.

2.6 MANUAL CONTROL

MAXinBOX allows manually switching the state of its output relays through the respective pushbuttons on the top of the device. A specific pushbutton is therefore available per output.

Manual operation can be done in two different ways, named as **Test On mode** (for testing purposes during the configuration of the device) and **Test Off mode** (for a normal use, anytime). Whether both, only one, or none of these modes should be accessible needs to be parameterised in ETS. Moreover, it is possible to enable a specific binary object for locking and unlocking the manual control in runtime.



Notes:

- *The **Test Off mode** will be active (unless it has been disabled by parameter) after a download or a reset with no need of a specific activation – the pushbuttons will respond to user presses from the start.*
- *On the contrary, switching to the **Test On mode** (unless disabled by parameter) needs to be done by long pressing the Prog/Test button (for at least three seconds), until the LED is no longer red and turns yellow. From that moment, once the button is released, the LED light will remain green to confirm that the device has switched from the Test Off mode to the Test On mode. After that, an additional press will turn the LED yellow and then off, once the button is released. This way, the device leaves the Test On mode. Note that it will also leave this mode if a bus power failure takes place or if a manual control lock is sending from KNX bus.*

Test Off Mode

Under the Test Off Mode, the outputs can be controlled through both their communication objects and the actual pushbuttons located on the top of the device.

When one of these buttons is pressed, the output will behave as if an order had been received through the corresponding communication object, depending on whether the output is configured as either an individual output, as a shutter channel or as a fan coil.

- **Individual output:** a simple press (short or long) will make the output switch its on-off state, which will be reported to the KNX bus through the corresponding status object, if enabled.
- **Shutter Channel:** when the button is pressed, the device will act over the output according to the length of the button press and to the current state.
 - A **long press** makes the shutter start moving (upwards or downwards, depending on the button being pressed). The LED will light in green until the end of the motion. If the button gets pressed being the shutter already at the top or bottom positions, nothing will happen (the LED will not light).
 - A **short press** will make the shutter drive stop (if in motion), as it normally does when a step/stop order is received from the KNX bus. In case of not being the shutter in motion, pressing the button does not cause any action, unless slats/lamellas have been parameterized – in such case, a step movement (up/down, depending on the button pressed) will take place. The status objects will be sent to the bus when corresponding.
- **Fan Coil module:** the behaviour will depend on whether a fan-labelled  or a valve-labelled  button is pressed:
 - **Fan:** for this type of buttons, it must be considered that there are two types of control for the fan speed:
 - **Switching control:** a short or long press will switch the relays to set the selected speed, unless it matches the current speed – in such case all the relays will be opened (speed 0). The associated LEDs will indicate the state of the fan speed control relays (on = relay closed; off = relay open).
 - **Accumulation control:** a short or long press switch to the selected speed, closing the relay associated with that speed, and the relays assigned to the lower speeds, unless it matches the current speed – in such case all the relays will be opened (speed 0). The associated LEDs will indicate the state of the fan speed control relays (on = relay closed; off = relay open).

Note: *the behaviour of the relays will depend on the parameterisation, i.e., on the **number of fan speeds**, and on the **delay** between switches.*

- **Valve:** a short or long press will switch the current status of the relay and therefore of the valve. The LED will show the state of the relay anytime (on = relay closed; off = relay open).
- **Disabled output:** outputs disabled by parameter will not react to button presses under the Test Off mode.

Regarding the lock, timer, alarm and scene functions, the device will behave under the Test Off mode as usual. Button presses during this mode are entirely analogous to the reception of the corresponding orders from the KNX bus.

Test On Mode

After entering the Test On mode, it will only be possible to control the outputs through the on-board pushbuttons. Orders received through communication objects will be ignored, with independence of the channel or the output they are addressed to.

Depending on whether the output has been parameterized as an individual output or as part of a shutter channel, the reactions to the button presses will differ.

- **Individual output:** short or long pressing the button will commute the on-off state of the relay.
- **Shutter channel:** pressing the button will make the shutter drive move upward or downward (depending on the button) until the button is released again, thus ignoring the position of the shutter and the parameterized times. For safety reasons, only one closed relay per shutter channel is allowed.

Note: *after leaving the Test On mode, the status objects will recover the values they had prior to entering Test On. As the device is never aware of the actual position of the shutter (as the shutter drive does not provide any feedback), these values may not show the real position. This can be solved by performing a complete move-up or move-down order, or by calibrating the shutter position in the Test On mode until it matches the status objects.*

- **Fan Coil module:** the behaviour is similar to that of the Test Off mode, although in this case the three fan speeds are supposed available.
- **Disabled output:** short and long presses will switch the state of the corresponding relay. In case this consists in closing the relay, then the remaining relays of its block will open, for safety reasons.

As described previously if the device is in Test On mode, any command sent from the KNX bus to the actuator will not affect the outputs and no status objects will be sent (only periodically timed objects such as Heartbeat, logic functions or master light will continue to be sent to the bus) while Test ON mode is active. However, in the case of the "Alarm" and "Block" objects, although in Test ON mode the actions received by each object are not considered, the evaluation of their status is carried out when exiting this mode, so that any change in the alarm status or blocking of the outputs while Test ON mode is active is taken into account when exiting this mode and is updated with the last status detected.

Important: *the device is delivered from factory with all the outputs disabled, and with both manual modes (Test Off and Test On) enabled.*

ETS PARAMETERISATION

The **Manual Control** is configured from the Configuration tab itself under Manual Control. The only two parameters are:

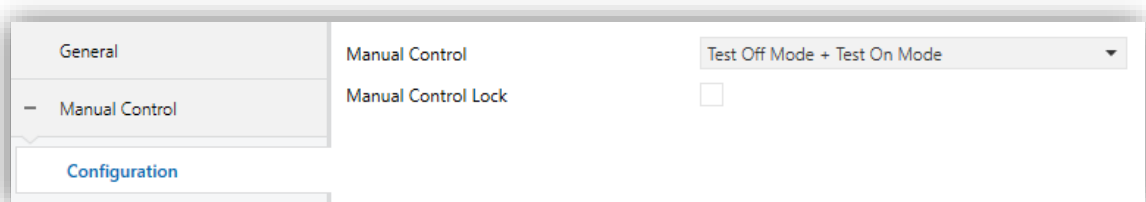


Figure 7. Manual Control

- **Manual Control** [*Disabled / Only Test Off Mode / Only Test On Mode / [Test Off Mode + Test On Mode](#)*]. Depending on the selection, the device will permit using the manual control under the Test Off, the Test On, or both modes. Note that, as stated before, using the Test Off mode does not require any special action, while switching to the Test On mode does require long pressing the Prog/Test button.

- **Manual Control Lock** [*enabled/disabled*]: unless the above parameter has been “Disabled,” the Lock Manual Control parameter provides an optional procedure for locking the manual control in runtime. When this checkbox is enabled, object “**Manual Control Lock**” turns visible, as well as two more parameters:
 - **Value** [*0 = Lock; 1 = Unlock / 0 = Unlock; 1 = Lock*]: defines whether the manual control lock/unlock should take place respectively upon the reception (through the aforementioned object) of values “0” and “1”, or the opposite.
 - **Initialization** [*Unlocked / Locked / Last Value*]: sets how the lock state of the manual control should remain after the device start-up (after an ETS download or a bus power failure). “Last Value” (default; on the very first start-up, this will be Unlocked).

ANNEX I. COMMUNICATION OBJECTS – MAXINBOX 20 / 12 / 8 V4

- “**Functional range**” shows the values that, with independence of any other values permitted by the bus according to the object size, may be of any use or have a particular meaning because of the specifications or restrictions from both the KNX standard or the application programme itself.

Note: Some of the numbers in the first column are only applicable to some models.

Number	Size	I/O	Flags	Data type (DPT)	Functional Range	Name	Function
1	1 Bit		C - - T -	DPT_Trigger	0/1	[Heartbeat] Object to Send '1'	Sending of '1' Periodically
2	1 Bit		C - - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 0
3	1 Bit		C - - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 1
4	1 Bit	I	C - W - -	DPT_Enable	0/1	Lock Manual Control	0 = Lock; 1 = Unlock
	1 Bit	I	C - W - -	DPT_Enable	0/1	Lock Manual Control	0 = Unlock; 1 = Lock
5, 16, 27, 38, 49, 60, 71, 82, 93, 104, 115, 126, 137, 148, 159, 170, 181, 192, 203, 214, 225, 236, 247, 258	1 Byte	I	C - W - -	DPT_SceneControl	0-63; 128-191	[Ox] Scenes	0 – 63 (Execute 1 – 64); 128 – 191 (Save 1 – 64)
6, 17, 28, 39, 50, 61, 72, 83, 94, 105, 116, 127, 138, 149, 160, 171, 182, 193, 204, 215, 226, 237, 248, 259	1 Bit	I	C - W - -	DPT_BinaryValue	0/1	[Ox] On/Off	N.O. (0=Open Relay; 1=Close Relay)
	1 Bit	I	C - W - -	DPT_BinaryValue	0/1	[Ox] On/Off	N.C. (0=Close Relay; 1= Open Relay)
7, 18, 29, 40, 51, 62, 73, 84, 95, 106, 117, 128, 139, 150, 161, 172, 183, 194, 205, 216, 227, 238, 249, 260	1 Bit	O	C R - T -	DPT_BinaryValue	0/1	[Ox] On/Off (Status)	0=Output Off; 1=Output On
8, 19, 30, 41, 52, 63, 74, 85, 96, 107, 118, 129, 140, 151, 162, 173, 184, 195, 206, 217, 228, 239, 250, 261	1 Bit	I	C - W - -	DPT_Enable	0/1	[Ox] Lock	0=Unlock; 1=Lock
9, 20, 31, 42, 53, 64, 75, 86, 97, 108, 119, 130, 141, 152, 163, 174, 185, 196, 207, 218, 229, 240, 251, 262	1 Bit	I	C - W - -	DPT_Start	0/1	[Ox] Timer	0=Switch Off; 1=Switch On
10, 21, 32, 43, 54, 65, 76, 87, 98, 109, 120, 131, 142, 153, 164, 175, 186, 197, 208, 219, 230, 241, 252, 263	1 Bit	I	C - W - -	DPT_Start	0/1	[Ox] Flashing	0=Stop; 1=Start

11, 22, 33, 44, 55, 66, 77, 88, 99, 110, 121, 132, 143, 154, 165, 176, 187, 198, 209, 220, 231, 242, 253, 264	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Ox] Alarm	0=Normal; 1=Alarm
	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Ox] Alarm	0=Alarm; 1=Normal
12, 23, 34, 45, 56, 67, 78, 89, 100, 111, 122, 133, 144, 155, 166, 177, 188, 199, 210, 221, 232, 243, 254, 265	1 Bit	I	C - W - -	DPT_Ack	0/1	[Ox] Unfreeze Alarm	Alarm=0 + Unfreeze=1 => End Alarm
13, 24, 35, 46, 57, 68, 79, 90, 101, 112, 123, 134, 145, 156, 167, 178, 189, 200, 211, 222, 233, 244, 255, 266	1 Bit	O	C R - T -	DPT_State	0/1	[Ox] Warning Time (Status)	0=Normal; 1=Warning
14, 25, 36, 47, 58, 69, 80, 91, 102, 113, 124, 135, 146, 157, 168, 179, 190, 201, 212, 223, 234, 245, 256, 267	4 Bytes	I/O	C R W T -	DPT_LongDeltaTimeSec	-2147483648 - 2147483647	[Ox] Operating Time (s)	Time in Seconds
15, 26, 37, 48, 59, 70, 81, 92, 103, 114, 125, 136, 147, 158, 169, 180, 191, 202, 213, 224, 235, 246, 257, 268	2 Bytes	I/O	C R W T -	DPT_TimePeriodHrs	0 - 65535	[Ox] Operating Time (h)	Time in Hours
269	1 Byte	I	C - W - -	DPT_SceneControl	0-63; 128-191	[Shutter] Scenes	0 - 63 (Execute 1 - 64); 128 - 191 (Save 1 - 64)
270, 299, 328, 357, 386, 415, 444, 473, 502, 531, 560, 589	1 Bit	I	C - W - -	DPT_UpDown	0/1	[Cx] Move	0 = Raise; 1 = Lower
271, 300, 329, 358, 387, 416, 445, 474, 503, 532, 561, 590	1 Bit	I	C - W - -	DPT_Step	0/1	[Cx] Stop/Step	0 = Stop/StepUp; 1 = Stop/StepDown
	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Stop	0 = Stop; 1 = Stop
272, 301, 330, 359, 388, 417, 446, 475, 504, 533, 562, 591	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Switched Control	0, 1 = Up, Down or Stop, Depending on the Last Move
273, 302, 331, 360, 389, 418, 447, 476, 505, 534, 563, 592	1 Bit	I	C - W - -	DPT_Enable	0/1	[Cx] Lock	0 = Unlock; 1 = Lock
274, 303, 332, 361, 390, 419, 448, 477, 506, 535, 564, 593	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Shutter Positioning	0% = Top; 100% = Bottom
275, 304, 333, 362, 391, 420, 449, 478, 507, 536, 565, 594	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Cx] Shutter Position (Status)	0% = Top; 100% = Bottom
276, 305, 334, 363, 392, 421, 450, 479, 508, 537, 566, 595	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Slats Positioning	0% = Open; 100% = Closed
277, 306, 335, 364, 393, 422, 451, 480, 509, 538, 567, 596	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Cx] Slats Position (Status)	0% = Open; 100% = Closed
278, 307, 336, 365, 394, 423, 452, 481, 510, 539, 568, 597	1 Bit	O	C R - T -	DPT_Switch	0/1	[Cx] Rising Relay (Status)	0 = Open; 1 = Closed
279, 308, 337, 366, 395, 424, 453, 482, 511, 540, 569, 598	1 Bit	O	C R - T -	DPT_Switch	0/1	[Cx] Lowering Relay (Status)	0 = Open; 1 = Closed

280, 309, 338, 367, 396, 425, 454, 483, 512, 541, 570, 599	1 Bit	O	CR - T -	DPT_Switch	0/1	[Cx] Movement (Status)	0 = Stopped; 1 = Moving
281, 310, 339, 368, 397, 426, 455, 484, 513, 542, 571, 600	1 Bit	O	CR - T -	DPT_UpDown	0/1	[Cx] Movement Direction (Status)	0 = Upward; 1 = Downward
282, 311, 340, 369, 398, 427, 456, 485, 514, 543, 572, 601	1 Bit	I	C - W - -	DPT_Switch	0/1	[Cx] Auto: On/Off	0 = On; 1 = Off
	1 Bit	I	C - W - -	DPT_Switch	0/1	[Cx] Auto: On/Off	0 = Off; 1 = On
283, 312, 341, 370, 399, 428, 457, 486, 515, 544, 573, 602	1 Bit	O	CR - T -	DPT_Switch	0/1	[Cx] Auto: On/Off (Status)	0 = On; 1 = Off
	1 Bit	O	CR - T -	DPT_Switch	0/1	[Cx] Auto: On/Off (Status)	0 = Off; 1 = On
284, 313, 342, 371, 400, 429, 458, 487, 516, 545, 574, 603	1 Bit	I	C - W - -	DPT_UpDown	0/1	[Cx] Auto: Move	0 = Raise; 1 = Lower
285, 314, 343, 372, 401, 430, 459, 488, 517, 546, 575, 604	1 Bit	I	C - W - -	DPT_Step	0/1	[Cx] Auto: Stop/Step	0 = Stop/StepUp; 1 = Stop/StepDown
	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Auto: Stop	0 = Stop; 1 = Stop
286, 315, 344, 373, 402, 431, 460, 489, 518, 547, 576, 605	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Auto: Shutter Positioning	0% = Top; 100% = Bottom
287, 316, 345, 374, 403, 432, 461, 490, 519, 548, 577, 606	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Auto: Slats Positioning	0% = Open; 100% = Closed
288, 317, 346, 375, 404, 433, 462, 491, 520, 549, 578, 607	1 Bit	I	C - W T U	DPT_Scene_AB	0/1	[Cx] Sunshine/Shadow	0 = Sunshine; 1 = Shadow
	1 Bit	I	C - W T U	DPT_Scene_AB	0/1	[Cx] Sunshine/Shadow	0 = Shadow; 1 = Sunshine
289, 318, 347, 376, 405, 434, 463, 492, 521, 550, 579, 608	1 Bit	I	C - W T U	DPT_Heat_Cool	0/1	[Cx] Cooling/Heating	0 = Heating; 1 = Cooling
	1 Bit	I	C - W T U	DPT_Heat_Cool	0/1	[Cx] Cooling/Heating	0 = Cooling; 1 = Heating
290, 319, 348, 377, 406, 435, 464, 493, 522, 551, 580, 609	1 Bit	I	C - W T U	DPT_Occupancy	0/1	[Cx] Presence/No Presence	0 = Presence; 1 = No Presence
	1 Bit	I	C - W T U	DPT_Occupancy	0/1	[Cx] Presence/No Presence	0 = No Presence; 1 = Presence
291, 292, 320, 321, 349, 350, 378, 379, 407, 408, 436, 437, 465, 466, 494, 495, 523, 524, 552, 553, 581, 582, 610, 611	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Cx] Alarm x	0 = No Alarm; 1 = Alarm
	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Cx] Alarm x	0 = Alarm; 1 = No Alarm
293, 322, 351, 380, 409, 438, 467, 496, 525, 554, 583, 612	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Unfreeze Alarm	Alarm1 = Alarm2 = No Alarm + Unfreeze (1) => End Alarm
294, 323, 352, 381, 410, 439, 468, 497, 526, 555, 584, 613	1 Bit	I	C - W - -	DPT_Scene_AB	0/1	[Cx] Move (Reversed)	0 = Lower; 1 = Raise
295, 324, 353, 382, 411, 440, 469, 498, 527, 556, 585, 614	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 1	0 = No Action; 1 = Go to Position
296, 325, 354, 383, 412, 441, 470, 499, 528, 557, 586, 615	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 2	0 = No Action; 1 = Go to Position
297, 326, 355, 384, 413, 442, 471, 500, 529, 558, 587, 616	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 1 (Save)	0 = No Action; 1 = Save Current Position
298, 327, 356, 385, 414, 443, 472, 501, 530, 559, 588, 617	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 2 (Save)	0 = No Action; 1 = Save Current Position
618	1 Byte	I	C - W - U	DPT_SceneControl	0-63; 128-191	[Fan Coil] Scenes	0 - 63 (Execute 1 - 64); 128 - 191 (Save 1 - 64)

619, 652, 685, 718, 751, 784	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] On/Off	0 = Off; 1 = On
620, 653, 686, 719, 752, 785	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] On/Off (Status)	0 = Off; 1 = On
621, 654, 687, 720, 753, 786	1 Bit	I	C - W - U	DPT_Heat_Cool	0/1	[FCx] Mode	0 = Cool; 1 = Heat
622, 655, 688, 721, 754, 787	1 Bit	O	CR - T -	DPT_Heat_Cool	0/1	[FCx] Mode (Status)	0 = Cool; 1 = Heat
623, 656, 689, 722, 755, 788	1 Bit	I	C - W - U	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic	0 = Automatic; 1 = Manual
	1 Bit	I	C - W - U	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic	0 = Manual; 1 = Automatic
624, 657, 690, 723, 756, 789	1 Bit	O	CR - T -	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic (Status)	0 = Automatic; 1 = Manual
	1 Bit	O	CR - T -	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic (Status)	0 = Manual; 1 = Automatic
625, 658, 691, 724, 757, 790	1 Bit	I	C - W - U	DPT_Step	0/1	[FCx] Manual Fan: Step Control	0 = Down; 1 = Up
626, 659, 692, 725, 758, 791	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 0	0 = Off; 1 = On
627, 660, 693, 726, 759, 792	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 1	0 = Off; 1 = On
628, 661, 694, 727, 760, 793	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 2	0 = Off; 1 = On
629, 662, 695, 728, 761, 794	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 3	0 = Off; 1 = On
630, 663, 696, 729, 762, 795	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Fan: Speed 0 (Status)	0 = Off; 1 = On
631, 664, 697, 730, 763, 796	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Fan: Speed 1 (Status)	0 = Off; 1 = On
632, 665, 698, 731, 764, 797	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Fan: Speed 2 (Status)	0 = Off; 1 = On
633, 666, 699, 732, 765, 798	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Fan: Speed 3 (Status)	0 = Off; 1 = On
634, 667, 700, 733, 766, 799	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1; S2 = 2; S3 = 3
	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1; S2 = 2
	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1
635, 668, 701, 734, 767, 800	1 Byte	O	CR - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1; S2 = 2; S3 = 3
	1 Byte	O	CR - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1; S2 = 2
	1 Byte	O	CR - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1
636, 669, 702, 735, 768, 801	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 0,4-33,3%; S2 = 33,7-66,7%; S3 = 67,1-100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 1-50%; S2 = 51-100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 1-100%

637, 670, 703, 736, 769, 802	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 33,3%; S2 = 66,6%; S3 = 100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 1-50%; S2 = 51-100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 1-100%
638, 671, 704, 737, 770, 803	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Cooling Fan: Continuous Control	0 - 100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Cooling Valve: PI Control (Continuous)	0 - 100%
639, 672, 705, 738, 771, 804	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Heating Fan: Continuous Control	0 - 100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Heating Valve: PI Control (Continuous)	0 - 100%
640, 673, 706, 739, 772, 805	1 Bit	I	C - W - U	DPT_OpenClose	0/1	[FCx] Cooling Valve: Control Variable (1 bit)	0 = Open Valve; 1 = Close Valve
	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Cooling Valve: Control Variable (1 bit)	0 = Close Valve; 1 = Open Valve
641, 674, 707, 740, 773, 806	1 Bit	I	C - W - U	DPT_OpenClose	0/1	[FCx] Heating Valve: Control Variable (1 bit)	0 = Open Valve; 1 = Close Valve
	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Heating Valve: Control Variable (1 bit)	0 = Close Valve; 1 = Open Valve
642, 675, 708, 741, 774, 807	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Cooling Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Cooling Valve (Status)	0 = Closed; 1 = Open
	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Valve (Status)	0 = Closed; 1 = Open
643, 676, 709, 742, 775, 808	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Heating Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Heating Valve (Status)	0 = Closed; 1 = Open
644, 677, 710, 743, 776, 809	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Cooling Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
645, 678, 711, 744, 777, 810	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Heating Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
646, 679, 712, 745, 778, 811	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Valve (Status)	0 - 100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Cooling Valve (Status)	0 - 100%
647, 680, 713, 746, 779, 812	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Heating Valve (Status)	0 - 100%
648, 681, 714, 747, 780, 813	1 Bit	O	CR - T -	DPT_Bool	0/1	[FCx] Control Value - Error	0 = No Error; 1 = Error
649, 682, 715, 748, 781, 814	2 Bytes	I	C - W - U	DPT_Value_Temp	-273.00° - 670433.28°	[FCx] Ambient Temperature	Ambient Temperature

650, 683, 716, 749, 782, 815	2 Bytes	I	C - W - U	DPT_Value_Temp	-273.00° - 670433.28°	[FCx] Setpoint Temperature	Setpoint Temperature
651, 684, 717, 750, 783, 816	2 Bytes	I/O	CRWTU	DPT_TimePeriodMin	0 - 65535	[FCx] Duration of Manual Control	0 = Endless; 1 - 1440 min
	2 Bytes	I/O	CRWTU	DPT_TimePeriodHrs	0 - 65535	[FCx] Duration of Manual Control	0 = Endless; 1 - 24 h
817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880	1 Bit	I	C - W - -	DPT_Bool	0/1	[LF] (1-Bit) Data Entry x	Binary Data Entry (0/1)
881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912	1 Byte	I	C - W - -	DPT_Value_1_Ucount	0 - 255	[LF] (1-Byte) Data Entry x	1-Byte Data Entry (0-255)
913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944	2 Bytes	I	C - W - -	DPT_Value_2_Ucount	0 - 65535	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960	4 Bytes	I	C - W - -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] (4-Byte) Data Entry x	4-Byte Data Entry
961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990	1 Bit	O	CR - T -	DPT_Bool	0/1	[LF] Function x - Result	(1-Bit) Boolean
	1 Byte	O	CR - T -	DPT_Value_1_Ucount	0 - 255	[LF] Function x - Result	(1-Byte) Unsigned
	2 Bytes	O	CR - T -	DPT_Value_2_Ucount	0 - 65535	[LF] Function x - Result	(2-Byte) Unsigned
	4 Bytes	O	CR - T -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] Function x - Result	(4-Byte) Signed
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[LF] Function x - Result	(1-Byte) Percentage
	2 Bytes	O	CR - T -	DPT_Value_2_Count	-32768 - 32767	[LF] Function x - Result	(2-Byte) Signed
	2 Bytes	O	CR - T -	9.xxx	-671088.64 - 670433.28	[LF] Function x - Result	(2-Byte) Float
991, 993, 995, 997, 999, 1001, 1003, 1005, 1007, 1009, 1011, 1013, 1015, 1017, 1019, 1021, 1023, 1025, 1027, 1029, 1031, 1033, 1035, 1037	4 Bytes	O	CR - T -	DPT_Value_4_Ucount	0 - 4294967295	[Relay x] Number of Switches	Number of Switches

992, 994, 996, 998, 1000, 1002, 1004, 1006, 1008, 1010, 1012, 1014, 1016, 1018, 1020, 1022, 1024, 1026, 1028, 1030, 1032, 1034, 1036, 1038	2 Bytes	O	C - R - T -	DPT_Value_2_Ucount	0 - 65535	[Relay x] Maximum Switches per Minute	Maximum Switches per Minute
1039, 1061	1 Bit	I	C - W - - -	DPT_Trigger	0/1	[MLx] Trigger	Trigger the Master Light Function
	1 Bit	I	C - W - - -	DPT_Ack	0/1	[MLx] Trigger	0 = Nothing; 1 = Trigger the Master Light Function
	1 Bit	I	C - W - - -	DPT_Ack	0/1	[MLx] Trigger	1 = Nothing; 0 = Trigger the Master Light Function
1040, 1041, 1042, 1043, 1044, 1045, 1046, 1047, 1048, 1049, 1050, 1051, 1062, 1063, 1064, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1072, 1073	1 Bit	I	C - W - - -	DPT_Switch	0/1	[MLx] Status Object x	Binary Status
1052, 1074	1 Bit	O	C - R - T -	DPT_Switch	0/1	[MLx] General Status	Binary Status
1053, 1075	1 Bit		C - - - T -	DPT_Switch	0/1	[MLx] General Switch Off: Binary Object	Switch Off Sending
1054, 1076	1 Byte		C - - - T -	DPT_Scaling	0% - 100%	[MLx] General Switch Off: Scaling	0-100%
1055, 1077	1 Byte		C - - - T -	DPT_SceneControl	0-63; 128-191	[MLx] General Switch Off: Scene	Scene Sending
1056, 1078	1 Byte		C - - - T -	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[MLx] General Switch Off: HVAC mode	Auto, Comfort, Standby, Economy, Building Protection
1057, 1079	1 Bit		C - - - T -	DPT_Switch	0/1	[MLx] Courtesy Switch On: Binary Object	Switch On Sending
1058, 1080	1 Byte		C - - - T -	DPT_Scaling	0% - 100%	[MLx] Courtesy Switch On: Scaling	0-100%
1059, 1081	1 Byte		C - - - T -	DPT_SceneNumber	0 - 63	[MLx] Courtesy Switch On: Scene	Scene Sending
1060, 1082	1 Byte		C - - - T -	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[MLx] Courtesy Switch On: HVAC mode	Auto, Comfort, Standby, Economy, Building Protection

ANNEX II. COMMUNICATION OBJECTS – MAXINBOX 16 V4

- “**Functional range**” shows the values that, with independence of any other values permitted by the bus according to the object size, may be of any use or have a particular meaning because of the specifications or restrictions from both the KNX standard or the application programme itself.

Number	Size	I/O	Flags	Data type (DPT)	Functional Range	Name	Function
1	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Object to Send '1'	Sending of '1' Periodically
2	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 0
3	1 Bit	O	C R - T -	DPT_Trigger	0/1	[Heartbeat] Device Recovery	Send 1
4	1 Bit	I	C - W - -	DPT_Enable	0/1	Lock Manual Control	0 = Lock; 1 = Unlock
	1 Bit	I	C - W - -	DPT_Enable	0/1	Lock Manual Control	0 = Unlock; 1 = Lock
5, 16, 27, 38, 49, 60, 71, 82, 93, 104, 115, 126, 137, 148, 159, 170, 181, 192, 203, 214, 225, 236, 247, 258	1 Byte	I	C - W - -	DPT_SceneControl	0-63; 128-191	[Ox] Scenes	0 – 63 (Execute 1 – 64); 128 – 191 (Save 1 – 64)
6, 17, 28, 39, 50, 61, 72, 83, 94, 105, 116, 127, 138, 149, 160, 171, 182, 193, 204, 215, 226, 237, 248, 259	1 Bit	I	C - W - -	DPT_BinaryValue	0/1	[Ox] On/Off	N.O. (0 = Open Relay; 1 = Close Relay)
	1 Bit	I	C - W - -	DPT_BinaryValue	0/1	[Ox] On/Off	N.C. (0 = Close Relay; 1 = Open Relay)
7, 18, 29, 40, 51, 62, 73, 84, 95, 106, 117, 128, 139, 150, 161, 172, 183, 194, 205, 216, 227, 238, 249, 260	1 Bit	O	C R - T -	DPT_BinaryValue	0/1	[Ox] On/Off (Status)	0 = Output Off; 1 = Output On
8, 19, 30, 41, 52, 63, 74, 85, 96, 107, 118, 129, 140, 151, 162, 173, 184, 195, 206, 217, 228, 239, 250, 261	1 Bit	I	C - W - -	DPT_Enable	0/1	[Ox] Lock	0 = Unlock; 1 = Lock
9, 20, 31, 42, 53, 64, 75, 86, 97, 108, 119, 130, 141, 152, 163, 174, 185, 196, 207, 218, 229, 240, 251, 262	1 Bit	I	C - W - -	DPT_Start	0/1	[Ox] Timer	0 = Switch Off; 1 = Switch On
10, 21, 32, 43, 54, 65, 76, 87, 98, 109, 120, 131, 142, 153, 164, 175, 186, 197, 208, 219, 230, 241, 252, 263	1 Bit	I	C - W - -	DPT_Start	0/1	[Ox] Flashing	0 = Stop; 1 = Start
11, 22, 33, 44, 55, 66, 77, 88, 99, 110, 121, 132, 143, 154,	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Ox] Alarm	0 = Normal; 1 = Alarm
	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Ox] Alarm	0 = Alarm; 1 = Normal

165, 176, 187, 198, 209, 220, 231, 242, 253, 264							
12, 23, 34, 45, 56, 67, 78, 89, 100, 111, 122, 133, 144, 155, 166, 177, 188, 199, 210, 221, 232, 243, 254, 265	1 Bit	I	C - W - -	DPT_Ack	0/1	[Ox] Unfreeze Alarm	Alarm = 0 + Unfreeze = 1 => End Alarm
13, 24, 35, 46, 57, 68, 79, 90, 101, 112, 123, 134, 145, 156, 167, 178, 189, 200, 211, 222, 233, 244, 255, 266	1 Bit	O	C R - T -	DPT_State	0/1	[Ox] Warning Time (Status)	0 = Normal; 1 = Warning
14, 25, 36, 47, 58, 69, 80, 91, 102, 113, 124, 135, 146, 157, 168, 179, 190, 201, 212, 223, 234, 245, 256, 267	4 Bytes	I/O	C R W T -	DPT_LongDeltaTimeSec	-2147483648 - 2147483647	[Ox] Operating Time (s)	Time in Seconds
15, 26, 37, 48, 59, 70, 81, 92, 103, 114, 125, 136, 147, 158, 169, 180, 191, 202, 213, 224, 235, 246, 257, 268	2 Bytes	I/O	C R W T -	DPT_TimePeriodHrs	0 - 65535	[Ox] Operating Time (h)	Time in Hours
269	1 Byte	I	C - W - -	DPT_SceneControl	0-63; 128-191	[Shutter] Scenes	0 - 63 (Execute 1 - 64); 128 - 191 (Save 1 - 64)
270, 302, 334, 366, 398, 430, 462, 494, 526, 558, 590, 622	1 Bit	I	C - W - -	DPT_UpDown	0/1	[Cx] Move	0 = Raise; 1 = Lower
271, 303, 335, 367, 399, 431, 463, 495, 527, 559, 591, 623	1 Bit	I	C - W - -	DPT_Step	0/1	[Cx] Stop/Step	0 = Stop/StepUp; 1 = Stop/StepDown
	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Stop	0 = Stop; 1 = Stop
272, 304, 336, 368, 400, 432, 464, 496, 528, 560, 592, 624	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Switched Control	0, 1 = Up, Down or Stop, Depending on the Last Move
273, 305, 337, 369, 401, 433, 465, 497, 529, 561, 593, 625	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Switched Control Up	0, 1 = Up or Stop, Depending on the Last Move
274, 306, 338, 370, 402, 434, 466, 498, 530, 562, 594, 626	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Switched Control Down	0, 1 = Down or Stop, Depending on the Last Move
275, 307, 339, 371, 403, 435, 467, 499, 531, 563, 595, 627	1 Bit	I	C - W - -	DPT_Enable	0/1	[Cx] Lock	0 = Unlock; 1 = Lock
276, 308, 340, 372, 404, 436, 468, 500, 532, 564, 596, 628	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Shutter Positioning	0% = Top; 100% = Bottom
277, 309, 341, 373, 405, 437, 469, 501, 533, 565, 597, 629	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Cx] Shutter Position (Status)	0% = Top; 100% = Bottom
278, 310, 342, 374, 406, 438, 470, 502, 534, 566, 598, 630	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Slats Positioning	0% = Open; 100% = Closed
279, 311, 343, 375, 407, 439, 471, 503, 535, 567, 599, 631	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[Cx] Slats Position (Status)	0% = Open; 100% = Closed
280, 312, 344, 376, 408, 440, 472, 504, 536, 568, 600, 632	1 Bit	O	C R - T -	DPT_Switch	0/1	[Cx] Rising Relay (Status)	0 = Open; 1 = Closed

281, 313, 345, 377, 409, 441, 473, 505, 537, 569, 601, 633	1 Bit	O	C - R - T -	DPT_Switch	0/1	[Cx] Lowering Relay (Status)	0 = Open; 1 = Closed
282, 314, 346, 378, 410, 442, 474, 506, 538, 570, 602, 634	1 Bit	O	C - R - T -	DPT_Switch	0/1	[Cx] Movement (Status)	0 = Stopped; 1 = Moving
283, 315, 347, 379, 411, 443, 475, 507, 539, 571, 603, 635	1 Bit	O	C - R - T -	DPT_UpDown	0/1	[Cx] Movement Direction (Status)	0 = Upward; 1 = Downward
284, 316, 348, 380, 412, 444, 476, 508, 540, 572, 604, 636	1 Bit	I	C - W - -	DPT_Switch	0/1	[Cx] Auto: On/Off	0 = On; 1 = Off
	1 Bit	I	C - W - -	DPT_Switch	0/1	[Cx] Auto: On/Off	0 = Off; 1 = On
285, 317, 349, 381, 413, 445, 477, 509, 541, 573, 605, 637	1 Bit	O	C - R - T -	DPT_Switch	0/1	[Cx] Auto: On/Off (Status)	0 = On; 1 = Off
	1 Bit	O	C - R - T -	DPT_Switch	0/1	[Cx] Auto: On/Off (Status)	0 = Off; 1 = On
286, 318, 350, 382, 414, 446, 478, 510, 542, 574, 606, 638	1 Bit	I	C - W - -	DPT_UpDown	0/1	[Cx] Auto: Move	0 = Raise; 1 = Lower
287, 319, 351, 383, 415, 447, 479, 511, 543, 575, 607, 639	1 Bit	I	C - W - -	DPT_Step	0/1	[Cx] Auto: Stop/Step	0 = Stop/StepUp; 1 = Stop/StepDown
	1 Bit	I	C - W - -	DPT_Trigger	0/1	[Cx] Auto: Stop	0 = Stop; 1 = Stop
288, 320, 352, 384, 416, 448, 480, 512, 544, 576, 608, 640	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Auto: Shutter Positioning	0% = Top; 100% = Bottom
289, 321, 353, 385, 417, 449, 481, 513, 545, 577, 609, 641	1 Byte	I	C - W - -	DPT_Scaling	0% - 100%	[Cx] Auto: Slats Positioning	0% = Open; 100% = Closed
290, 322, 354, 386, 418, 450, 482, 514, 546, 578, 610, 642	1 Bit	I	C - W T U	DPT_Scene_AB	0/1	[Cx] Sunshine/Shadow	0 = Sunshine; 1 = Shadow
	1 Bit	I	C - W T U	DPT_Scene_AB	0/1	[Cx] Sunshine/Shadow	0 = Shadow; 1 = Sunshine
291, 323, 355, 387, 419, 451, 483, 515, 547, 579, 611, 643	1 Bit	I	C - W T U	DPT_Heat_Cool	0/1	[Cx] Cooling/Heating	0 = Cooling; 1 = Heating
	1 Bit	I	C - W T U	DPT_Heat_Cool	0/1	[Cx] Cooling/Heating	0 = Heating; 1 = Cooling
292, 324, 356, 388, 420, 452, 484, 516, 548, 580, 612, 644	1 Bit	I	C - W T U	DPT_Occupancy	0/1	[Cx] Presence/No Presence	0 = No Presence; 1 = Presence
	1 Bit	I	C - W T U	DPT_Occupancy	0/1	[Cx] Presence/No Presence	0 = Presence; 1 = No Presence
293, 294, 325, 326, 357, 358, 389, 390, 421, 422, 453, 454, 485, 486, 517, 518, 549, 550, 581, 582, 613, 614, 645, 646	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Cx] Alarm x	0 = No Alarm; 1 = Alarm
	1 Bit	I	C - W - -	DPT_Alarm	0/1	[Cx] Alarm x	0 = Alarm; 1 = No Alarm
295, 327, 359, 391, 423, 455, 487, 519, 551, 583, 615, 647	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Unfreeze Alarm	Alarm1 = Alarm2 = No Alarm + Unfreeze (1) => End Alarm
296, 328, 360, 392, 424, 456, 488, 520, 552, 584, 616, 648	1 Bit	I	C - W - -	DPT_Scene_AB	0/1	[Cx] Move (Reversed)	0 = Lower; 1 = Raise
297, 329, 361, 393, 425, 457, 489, 521, 553, 585, 617, 649	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 1	0 = No Action; 1 = Go to Position
298, 330, 362, 394, 426, 458, 490, 522, 554, 586, 618, 650	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 2	0 = No Action; 1 = Go to Position
299, 331, 363, 395, 427, 459, 491, 523, 555, 587, 619, 651	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 1 (Save)	0 = No Action; 1 = Save Current Position
300, 332, 364, 396, 428, 460, 492, 524, 556, 588, 620, 652	1 Bit	I	C - W - -	DPT_Ack	0/1	[Cx] Direct Positioning 2 (Save)	0 = No Action; 1 = Save Current Position

301, 333, 365, 397, 429, 461, 493, 525, 557, 589, 621, 653	1 Bit	O	C R - T -	DPT_BinaryValue	0/1	[Cx] External Contact - Stop Movement	0 = Open Relay; 1 = Close Relay
654	1 Byte	I	C - W - -	DPT_SceneControl	0-63; 128-191	[Fan Coil] Scenes	0 - 63 (Execute 1 - 64); 128 - 191 (Save 1 - 64)
655, 688, 721, 754, 787, 820	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] On/Off	0 = Off; 1 = On
656, 689, 722, 755, 788, 821	1 Bit	O	C R - T -	DPT_Switch	0/1	[FCx] On/Off (Status)	0 = Off; 1 = On
657, 690, 723, 756, 789, 822	1 Bit	I	C - W - U	DPT_Heat_Cool	0/1	[FCx] Mode	0 = Cool; 1 = Heat
658, 691, 724, 757, 790, 823	1 Bit	O	C R - T -	DPT_Heat_Cool	0/1	[FCx] Mode (Status)	0 = Cool; 1 = Heat
659, 692, 725, 758, 791, 824	1 Bit	I	C - W - U	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic	0 = Automatic; 1 = Manual
	1 Bit	I	C - W - U	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic	0 = Manual; 1 = Automatic
660, 693, 726, 759, 792, 825	1 Bit	O	C R - T -	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic (Status)	0 = Automatic; 1 = Manual
	1 Bit	O	C R - T -	DPT_Enable	0/1	[FCx] Fan: Manual/Automatic (Status)	0 = Manual; 1 = Automatic
661, 694, 727, 760, 793, 826	1 Bit	I	C - W - U	DPT_Step	0/1	[FCx] Manual Fan: Step Control	0 = Down; 1 = Up
662, 695, 728, 761, 794, 827	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 0	0 = Off; 1 = On
663, 696, 729, 762, 795, 828	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 1	0 = Off; 1 = On
664, 697, 730, 763, 796, 829	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 2	0 = Off; 1 = On
665, 698, 731, 764, 797, 830	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Manual Fan: Speed 3	0 = Off; 1 = On
666, 699, 732, 765, 798, 831	1 Bit	O	C R - T -	DPT_Switch	0/1	[FCx] Fan: Speed 0 (Status)	0 = Off; 1 = On
667, 700, 733, 766, 799, 832	1 Bit	O	C R - T -	DPT_Switch	0/1	[FCx] Fan: Speed 1 (Status)	0 = Off; 1 = On
668, 701, 734, 767, 800, 833	1 Bit	O	C R - T -	DPT_Switch	0/1	[FCx] Fan: Speed 2 (Status)	0 = Off; 1 = On
669, 702, 735, 768, 801, 834	1 Bit	O	C R - T -	DPT_Switch	0/1	[FCx] Fan: Speed 3 (Status)	0 = Off; 1 = On
670, 703, 736, 769, 802, 835	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1; S2 = 2; S3 = 3
	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1; S2 = 2
	1 Byte	I	C - W - U	DPT_Fan_Stage	0 - 255	[FCx] Manual Fan: Enumeration Control	S0 = 0; S1 = 1
671, 704, 737, 770, 803, 836	1 Byte	O	C R - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1; S2 = 2; S3 = 3
	1 Byte	O	C R - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1; S2 = 2
	1 Byte	O	C R - T -	DPT_Fan_Stage	0 - 255	[FCx] Fan: Speed Enumeration (Status)	S0 = 0; S1 = 1
672, 705, 738, 771, 804, 837	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 0,4-33,3%; S2 = 33,7-66,7%; S3 = 67,1-100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 1-50%; S2 = 51-100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Manual Fan: Percentage Control	S0 = 0%; S1 = 1-100%

673, 706, 739, 772, 805, 838	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 33,3%; S2 = 66,6%; S3 = 100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 1-50%; S2 = 51-100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Fan: Speed Percentage (Status)	S0 = 0%; S1 = 1-100%
674, 707, 740, 773, 806, 839	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Cooling Fan: Continuous Control	0 - 100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Cooling Valve: PI Control (Continuous)	0 - 100%
675, 708, 741, 774, 807, 840	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Heating Fan: Continuous Control	0 - 100%
	1 Byte	I	C - W - U	DPT_Scaling	0% - 100%	[FCx] Heating Valve: PI Control (Continuous)	0 - 100%
676, 709, 742, 775, 808, 841	1 Bit	I	C - W - U	DPT_OpenClose	0/1	[FCx] Cooling Valve: Control Variable (1 bit)	0 = Open Valve; 1 = Close Valve
	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Cooling Valve: Control Variable (1 bit)	0 = Close Valve; 1 = Open Valve
677, 710, 743, 776, 809, 842	1 Bit	I	C - W - U	DPT_OpenClose	0/1	[FCx] Heating Valve: Control Variable (1 bit)	0 = Open Valve; 1 = Close Valve
	1 Bit	I	C - W - U	DPT_Switch	0/1	[FCx] Heating Valve: Control Variable (1 bit)	0 = Close Valve; 1 = Open Valve
678, 711, 744, 777, 810, 843	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Cooling Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Cooling Valve (Status)	0 = Closed; 1 = Open
	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Valve (Status)	0 = Closed; 1 = Open
679, 712, 745, 778, 811, 844	1 Bit	O	CR - T -	DPT_OpenClose	0/1	[FCx] Heating Valve (Status)	0 = Open; 1 = Closed
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Heating Valve (Status)	0 = Closed; 1 = Open
680, 713, 746, 779, 812, 845	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Cooling Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
681, 714, 747, 780, 813, 846	1 Bit	O	CR - T -	DPT_Switch	0/1	[FCx] Heating Valve: Anti-Seize Protection (Status)	0 = Not Active; 1 = Active
682, 715, 748, 781, 814, 847	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Valve (Status)	0 - 100%
	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Cooling Valve (Status)	0 - 100%
683, 716, 749, 782, 815, 848	1 Byte	O	CR - T -	DPT_Scaling	0% - 100%	[FCx] Heating Valve (Status)	0 - 100%
684, 717, 750, 783, 816, 849	1 Bit	O	CR - T -	DPT_Bool	0/1	[FCx] Control Value - Error	0 = No Error; 1 = Error
685, 718, 751, 784, 817, 850	2 Bytes	I	C - W - U	DPT_Value_Temp	-273.00° - 670433.28°	[FCx] Ambient Temperature	Ambient Temperature
686, 719, 752, 785, 818, 851	2 Bytes	I	C - W - U	DPT_Value_Temp	-273.00° - 670433.28°	[FCx] Setpoint Temperature	Setpoint Temperature

687, 720, 753, 786, 819, 852	2 Bytes	I/O	C R W T U	DPT_TimePeriodMin	0 - 65535	[FCx] Duration of Manual Control	0 = Endless; 1 - 1440 min
	2 Bytes	I/O	C R W T U	DPT_TimePeriodHrs	0 - 65535	[FCx] Duration of Manual Control	0 = Endless; 1 - 24 h
853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916	1 Bit	I	C - W - -	DPT_Bool	0/1	[LF] (1-Bit) Data Entry x	Binary Data Entry (0/1)
917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948	1 Byte	I	C - W - -	DPT_Value_1_Ucount	0 - 255	[LF] (1-Byte) Data Entry x	1-Byte Data Entry (0-255)
949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980	2 Bytes	I	C - W - -	DPT_Value_2_Ucount	0 - 65535	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
	2 Bytes	I	C - W - -	DPT_Value_2_Count	-32768 - 32767	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996	2 Bytes	I	C - W - -	9.xxx	-671088.64 - 670433.28	[LF] (2-Byte) Data Entry x	2-Byte Data Entry
	4 Bytes	I	C - W - -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] (4-Byte) Data Entry x	4-Byte Data Entry
997, 998, 999, 1000, 1001, 1002, 1003, 1004, 1005, 1006, 1007, 1008, 1009, 1010, 1011, 1012, 1013, 1014, 1015, 1016, 1017, 1018, 1019, 1020, 1021, 1022, 1023, 1024, 1025, 1026	1 Bit	O	C R - T -	DPT_Bool	0/1	[LF] Function x - Result	(1-Bit) Boolean
	1 Byte	O	C R - T -	DPT_Value_1_Ucount	0 - 255	[LF] Function x - Result	(1-Byte) Unsigned
	2 Bytes	O	C R - T -	DPT_Value_2_Ucount	0 - 65535	[LF] Function x - Result	(2-Byte) Unsigned
	4 Bytes	O	C R - T -	DPT_Value_4_Count	-2147483648 - 2147483647	[LF] Function x - Result	(4-Byte) Signed
	1 Byte	O	C R - T -	DPT_Scaling	0% - 100%	[LF] Function x - Result	(1-Byte) Percentage
	2 Bytes	O	C R - T -	DPT_Value_2_Count	-32768 - 32767	[LF] Function x - Result	(2-Byte) Signed
	2 Bytes	O	C R - T -	9.xxx	-671088.64 - 670433.28	[LF] Function x - Result	(2-Byte) Float
1027, 1029, 1031, 1033, 1035, 1037, 1039, 1041, 1043, 1045, 1047, 1049, 1051, 1053, 1055, 1057, 1059, 1061, 1063, 1065, 1067, 1069, 1071, 1073	4 Bytes	O	C R - T -	DPT_Value_4_Ucount	0 - 4294967295	[Relay x] Number of Switches	Number of Switches

1028, 1030, 1032, 1034, 1036, 1038, 1040, 1042, 1044, 1046, 1048, 1050, 1052, 1054, 1056, 1058, 1060, 1062, 1064, 1066, 1068, 1070, 1072, 1074	2 Bytes	O	C R - T -	DPT_Value_2_Ucount	0 - 65535	[Relay x] Maximum Switches per Minute	Maximum Switches per Minute
1075, 1097	1 Bit	I	C - W - -	DPT_Trigger	0/1	[MLx] Trigger	Trigger the Master Light Function
	1 Bit	I	C - W - -	DPT_Ack	0/1	[MLx] Trigger	0 = Nothing; 1 = Trigger the Master Light Function
	1 Bit	I	C - W - -	DPT_Ack	0/1	[MLx] Trigger	1 = Nothing; 0 = Trigger the Master Light Function
1076, 1077, 1078, 1079, 1080, 1081, 1082, 1083, 1084, 1085, 1086, 1087, 1098, 1099, 1100, 1101, 1102, 1103, 1104, 1105, 1106, 1107, 1108, 1109	1 Bit	I	C - W - -	DPT_Switch	0/1	[MLx] Status Object x	Binary Status
1088, 1110	1 Bit	O	C R - T -	DPT_Switch	0/1	[MLx] General Status	Binary Status
1089, 1111	1 Bit		C - - T -	DPT_Switch	0/1	[MLx] General Switch Off: Binary Object	Switch Off Sending
1090, 1112	1 Byte		C - - T -	DPT_Scaling	0% - 100%	[MLx] General Switch Off: Scaling	0-100%
1091, 1113	1 Byte		C - - T -	DPT_SceneControl	0-63; 128-191	[MLx] General Switch Off: Scene	Scene Sending
1092, 1114	1 Byte		C - - T -	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[MLx] General Switch Off: HVAC mode	Auto, Comfort, Standby, Economy, Building Protection
1093, 1115	1 Bit		C - - T -	DPT_Switch	0/1	[MLx] Courtesy Switch On: Binary Object	Switch On Sending
1094, 1116	1 Byte		C - - T -	DPT_Scaling	0% - 100%	[MLx] Courtesy Switch On: Scaling	0-100%
1095, 1117	1 Byte		C - - T -	DPT_SceneNumber	0 - 63	[MLx] Courtesy Switch On: Scene	Scene Sending
1096, 1118	1 Byte		C - - T -	DPT_HVACMode	1=Comfort 2=Standby 3=Economy 4=Building Protection	[MLx] Courtesy Switch On: HVAC mode	Auto, Comfort, Standby, Economy, Building Protection

ANNEX III. FUNCTIONALITIES PER MODEL

	MAXinBOX 20	MAXinBOX 16 v4	MAXinBOX 12	MAXinBOX 8 v4
Individual outputs	20	16	12	8
Shutter channels	10	8	6	4
Two-pipe fan coil modules	5	4	3	2
Logic functions	30	20	30	20
Master light control modules	2	2	2	2
Heartbeat	✓	✓	✓	✓
Scenes	✓	✓	✓	✓
Relay switches counter	✓	✓	✓	✓
Manual control	✓	✓	✓	✓
KNX Security	✓	✓	✓	✓

Table 1. Functionalities per model.

Join and send us your inquiries
about Zennio devices:

<https://support.zennio.com>

Zennio Avance y Tecnología S.L.

C/ Río Jarama, 132. Nave P-8.11
45007 Toledo, Spain.

Tel. +34 925 232 002

www.zennio.com

info@zennio.com